



Supplemental Page for Part #17876XA

CAUTION:

If your Low/Reverse rear servo has a heavy aftermarket spring *you must change it back to a stock return spring.*

If you do not use a stock rear servo spring you will *burn up the rear band.*

TURBO ACTION

1535 Owens Road, Jacksonville, FL 32218
Phone (904) 741-4850 *** FAX (904) 741-4853
www.turboaction.com



CHEETAH Pro Street Valve Body

PRND21 Stock Pattern, Manual/Automatic

**Part # 17876XA -Torqueflite 727 & 904 1966-Up Non Lock-Up
(Street and Strip Use)**

This valve body will give excellent results when properly installed, but care must be taken to read these instructions very carefully. This valve body can be installed much easier if transmission is cool. A new transmission filter is recommended, #17013 Filter, but not necessary.

Special Characteristics about your Cheetah Valve Body:

1. Requires **Kickdown Linkage to carburetor!**
2. **Manual Low - can be obtained at any speed, CAUTION!**
2. **Second to third shift will be vastly improved.**
3. **There is no line pressure reading at center check point in case. If pressure reading is desired, check on front servo in high gear (105 lbs.)**

STEP #1: If vehicle is on the ground, secure so it will not roll. (Preferably, vehicle should have all four wheels off the ground.) Place vehicle shift selector in park range. Remove throttle pressure linkage and gear selector linkage located on the driver's side of the vehicle. Disconnect only at the shaft coming out of the transmission case. You will note the two linkage levers on the shaft are fastened by a bolt in each case. Loosen these bolts but do not remove bolts completely. After loosening bolts, carefully pry levers upward with a screwdriver.

STEP #2: Remove all pan bolts but two on one end. This way you will be able to drain the transmission without getting soaked with oil. These two bolts can be gradually loosened off after most of the oil has been drained.

STEP #3: Carefully remove the ten 7/16" bolts which hold the valve body in place, Fig. #1. Slowly pull valve body out of transmission, noting the hole that the long swinging rod came from, Fig. #2. It may be necessary to turn drive shaft to release long swinging rod. The rod controls your car's park function. Most Torqueflites will have a large spring between the accumulator piston and the valve body, Fig. #3. **This spring should be removed. Note: Some Torqueflites may have a spring under the piston and it should also be removed. They will no longer be used.**

- STEP #4:** The transmission valve body is a very intricate piece of your transmission and therefore care should be taken to keeping it clean while working on it. Lay old valve body on a bench or table so that the swinging park arm is laying towards you. Remove small e-clip that holds the park arm in place (Fig.#4). Install this arm on the new valve body. The arm should fit the same as it did on the old valve body.
- STEP #5:** Remove the three screws that hold the old filter on the old valve body. Take the three screws and either the old filter or a new filter #17013 and place onto the new valve body and tighten down with the three screws. **NOTE: Be sure the filter you install has only one pick-up hole. If you are using a deep pan, be sure the pick-up has only one hole.**
- STEP #6: Rear Band Adjustment:** Holding the locknut, turn adjustment bolt clockwise till it is finger tight (10 in/lbs), then back off **3** turns **TF727**, **4** turns **1971-Up TF904**, **998**, **999 V8's** and **3 1/2** turns all other **TF904**. Hold the bolt and tighten the locknut.
- STEP #7:** Before reinstalling valve body into transmission, take note of the plastic half ball or square shaped neutral switch on the driver's side of the transmission inside of the transmission case, Fig. #10. When installing the valve body, **make sure** this plastic half ball does not get damaged, Fig. #5. Either remove the neutral switch or merely slide the valve body carefully over the plastic. The plastic will retract if you put pressure on it (Fig. #6). Also, do not reinstall accumulator spring(s) which were between valve body and the case, Fig #3.
- STEP #8:** Place valve body back into transmission pushing rod into hole that was mentioned in STEP #3 (Fig. #2). The rod should be angled toward the outside in the rear of transmission and towards the center of the transmission in the front. Push rod firmly towards rear while turning drive shaft. **BUT DO NOT FORCE ROD OR VALVE BODY.**
- STEP #9:** With valve body in place, install ten valve body bolts and tighten to 8-10 ft./lbs. **Caution: Be sure valve body sits flat before tightening.**
- STEP #10:** Clean pan and install with a new pan gasket.
- STEP #11:** Reinstall shift linkage (large piece) and tighten bolt. Adjust linkage to be sure that shifter is selecting all gears properly.
- STEP #12:** Reinstall throttle linkage from carburetor to the small shaft on the transmission. Besure it is fully down on the shaft and check that when the throttle is wide open the kickdown lever should be fully back, less 1/16 inch.
- Step #13: FRONT BAND (Kickdown) ADJUSTMENT (Except double wrap):** Adjust front band per the following specs - (a) Locate the adjustment on driver's side on the outside of the transmission, just ahead of the linkage. (b) You will need a 3/4" wrench and an open end 5/16" wrench. Break the locknut loose (3/4" nut). Now holding the locknut, turn the square lug in the center of the locknut with your 5/16" open end wrench. Turn wrench clockwise until wrench becomes snug (10 in./lbs.). Make sure locknut doesn't move while tightening the square lug. (c) Now carefully turn 5/16" wrench counter clockwise 1 1/2 (6 Flats) turns. Holding the 5/16" wrench, tighten the 3/4" wrench to 35 ft./lbs. (very tight). **DO NOT** allow the square lug to move while tightening the 3/4" locknut.

STEP #14: Refill transmission with a good Dexron III fluid, Mopar #7176 or type "F" ATF. It will usually take about 5-9 quarts of oil depending on type of pan (stock or deep). **DO NOT OVERFILL!** Warm transmission up, **select all gears** and then **recheck** oil level. **Always check level of transmission fluid when in neutral, but put parking brake on as a safety measure or have someone sit in car with the foot brake applied.**

FEATURES: THIS VALVE BODY HAS BOTH MANUAL AND AUTOMATIC FEATURES WITH **STOCK PATTERN (PRND21)** AND HAS **MANUAL LOW ANY SPEED!**



Fig. #1 Remove Ten Bolts



Fig. #2 Park Rod



Fig. #3 Remove Spring(s) Do **Not** Reinstall!

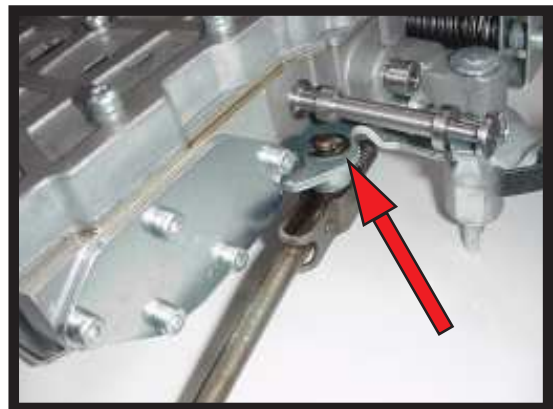


Fig. #4 Remove E-Clip



Fig. #5



Fig. #6