

# TURBO ACTION

1535 Owens Road, Jacksonville, FL 32218  
Phone 904-741-4850 \* Fax 904-741-4853

## COMMAND CENTER for CHEETAH SCS SHIFTER

### Part #70250

#### Installation Instructions

Kit Includes:	1	-	70087	Decal, Start;Ign;Fuel;Fuel
	1	-	70088	Decal, Fan;Pump;Lights;Aux
	2	-	70089	Decals, Turbo Action Command Center (Installed)
	1	-	70153	Bushing, 5/8 to 15/32
	4	-	70159	Screws, Truss 1/4 - 20 X 1/2
	1	-	70258	Cover, Plastic
	7	-	00775	Switches, Toggle (30 Amp)
	1	-	00778	Switch, Push to Start (35 Amp)

Turbo Action, Inc., a supplier of Hi-Performance Automatic Transmissions, Shifters and Converters, thanks you for your purchase of the Turbo Action Command Center. The Turbo Action Command Center provides a handsome cover for the revolutionary Turbo Action *CHEETAH SCS Shifter*, but more important it brings all major functions of the vehicle to within easy driver reach. The Turbo Action Command Center is a major breakthrough in safety by providing fingertip control to functions such as starter, ignition, fuel pumps, fan, lights, etc. No more loose safety belts or harness. All switches are heavy duty and have high current carrying capabilities. The light weight cover with factory switches provides function, safety, easy accessibility for service and a hi-tech look for the vehicle's interior. The Turbo Action Command Center will fit all models of the *CHEETAH SCS Shifter*.

STEP #1: The Command Center can be used with Chrysler, Ford or G.M. *CHEETAH SCS Shifters*.

STEP #2: Note that both sides of cover has three small holes and one large hole. The one large hole is for the Push to Start Start Switch, the other large hole you will insert bushing provided and then install the toggle switch. Figure #1 shows an example of bushing inserted on the inside of cover with toggle switch in place.

STEP #3: We recommend installing the Push to Start Switch on the driver's side. See Fig. #2 for G.M. and Ford shifter. See Fig. #3 for Chrysler shifter.

STEP #4: Carefully install decals on appropriate sides of cover.

STEP #5: Install nuts on toggle switches.

STEP #6: Install bushing in hole that will be the Aux. position on decal. Note the bushing installs from the underside of cover. See Fig. #1.


STEP #7: Install the toggle switch into the hole with the bushing.

Important: All toggle switches should be installed with the off towards the outside of the shifter. See Fig. #4.

STEP #8: Install three more toggle switches on the Aux. side.

- STEP #9:** Install Push to Start Switch first on the start side of cover.
- STEP #10:** Install three more toggle switches on the start side of cover.
- STEP #11:** Suggest using 14 gauge wire for your wiring to the switches.
- STEP #12:** Be sure all wires are clear of shifter moving mechanism.
- STEP #13:** Be sure no wires are shorting out from one switch to another.
- STEP #14:** Suggest drilling 3/16" hole in corner as shown in Fig. #5. This way you can run your wire from your roll control into cover for a clean and neat appearance.

**Fig. #1**

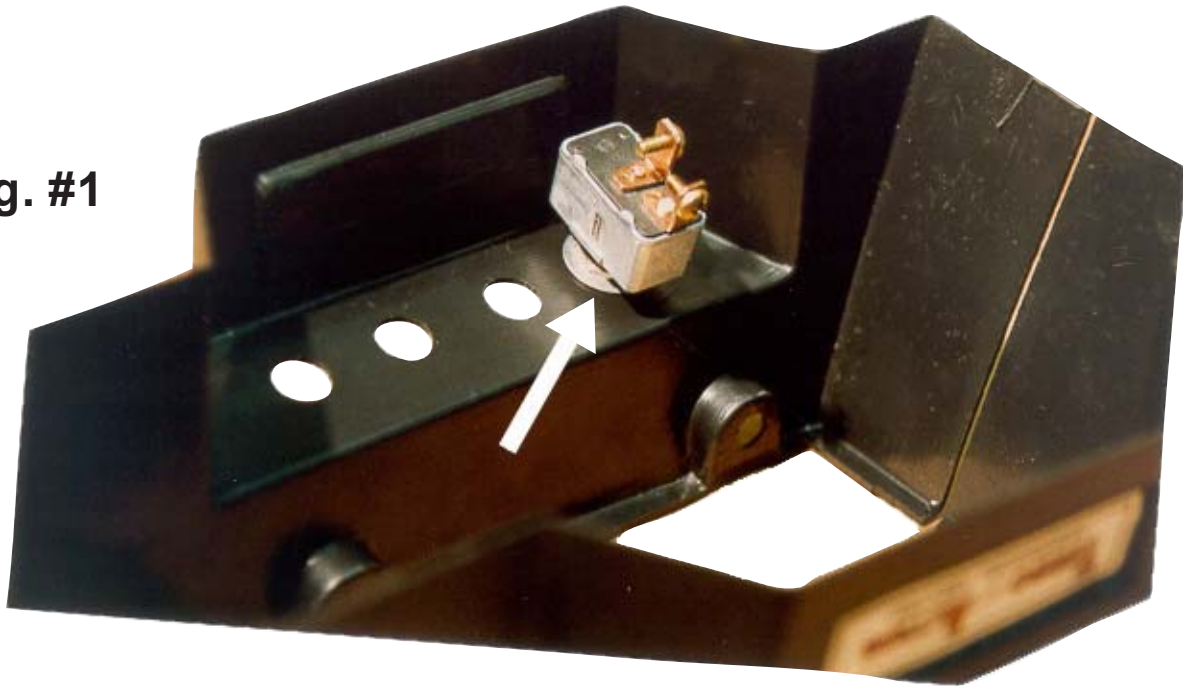

**Fig. #2**  
**G.M. & Ford Shifter**



**Fig. #3**  
**Chrysler Shifter**



Fig. #4



Fig. #5